

WATER & SOIL

MANAGEMENT PUBLICATION

No. 10

Water and Soil Guideline for Pipeline Easements



**NATIONAL WATER AND SOIL
CONSERVATION ORGANISATION**

ISSN 0110-4691

WATER & SOIL TECHNICAL PUBLICATIONS

1. Liquid and waterborne wastes research in New Zealand, 1976 (\$1) 1977
2. Sampling of surface waters. (\$1) 1977
3. Water quality research in New Zealand 1976. (\$1) 1977
5. Late Quaternary sedimentary processes at Ohiwa Harbour, eastern Bay of Plenty with special reference to property loss on Ohiwa. (\$1) 1978
9. Research and Survey annual review 1977. (\$2) 1978
11. The Waikato River: A water resources study. (\$12) 1979
12. A review of the habitat requirements of fish in New Zealand rivers. (\$3) 1979
13. The Ruahine Range: A situation review and proposals for integrated management of the Ruahine Range and the rivers affected by it. (\$5) 1978
14. A Survey of New Zealand peat resources. (\$10) 1978
15. Effects of urban land use on water quantity and quality: an annotated bibliography. (\$5) 1980
16. Research and Survey annual review 1978. (\$2) 1979
17. Investigations into the use of the bacterial species *Bacillus stearothermophilus* and *Escherichia coli* (H₂S positive) as tracers of groundwater movement. (\$1.50) 1980
18. A review of some biological methods for the assessment of water quality with special reference to New Zealand. Part 1. (\$3) 1979
19. The frequency of high intensity rainfalls in New Zealand, Part I. A. I. Tomlinson (\$5) 1980
20. Regional flood estimation in New Zealand. (\$8) 1982
21. Coastal hazard mapping as a planning technique for Waipatu County, East Coast, North Island, New Zealand. (\$5) 1981
22. A review of some biological methods for the assessment of water quality with special reference to New Zealand. Part 2. (\$4) 1981
23. Hydrology of the catchments draining to the Pauatahanui Inlet. (\$3) 1981
24. Potential for contamination of the Heretaunga Plains aquifers (\$10) 1982
25. Revised checklist of freshwater algae of New Zealand. Part 1. (\$10) 1984
26. Revised checklist of freshwater algae of New Zealand. Part 2. (\$10) 1984

WATER & SOIL MANAGEMENT PUBLICATIONS

1. Regional planning and development. (\$1) 1975
2. Wetlands. (\$1) 1975
5. Forest operations guideline. (\$2) 1978
6. A guideline for the construction of access tracks and firebreaks. (\$2) 1980
7. A guideline to skifield development. (\$2) 1980
8. A wetlands guideline. (\$5) 1982
9. A water and soil guideline for mining. (\$10) 1983
10. Water and soil guideline for pipeline easements. (\$3) 1985

WATER & SOIL MANAGEMENT PUBLICATION NO. 10

No. 10
Water and Soil Guideline for
Pipeline Easements

BY

EUAN ROBERTSON, PIPELINE PROJECT, MWD, NEW PLYMOUTH.

WELLINGTON 1985

Water and Soil Guideline for Pipeline Easements

by Euan Robertson, Pipeline Project, MWD, New Plymouth.

Water & Soil Management Publication No. 10, 1985, 14pp. ISSN 0110-4691

This publication outlines the procedures used by the Pipeline Project of the Ministry of Works and Development in locating, constructing and reinstating a pipeline. Topics discussed include locating a line, legal requirements, construction, trenching and backfill procedures, and reinstatement and maintenance of a pipeline. It is written for those directly involved in laying a line and emphasises techniques recommended for the reinstatement and maintenance stages.

National Library of New Zealand
Cataloguing-in-Publication data

ROBERTSON, Euan.

Water and soil guideline for pipeline easements / by Euan Robertson. - Wellington, N.Z. : Water and Soil Directorate, Ministry of Works and Development for the National Water and Soil Conservation Authority, 1985. - 1 v. - (Water & soil management publication, 0110-4691 ; no. 10)

665.54409931


1. Petroleum--New Zealand--Pipe lines--Design and construction. 2. Gas, Natural--New Zealand--Pipe lines--Design and construction. 3. Petroleum--New Zealand--Pipe lines--Maintenance and repair. 4. Gas, Natural--New Zealand--Pipe lines--Maintenance and repair.
I. New Zealand. Water and Soil Directorate.
II. National Water and Soil Conservation Authority (N.Z.). III. Title. IV. Series.

©Crown Copyright 1985

Published for the National Water and Soil Conservation Authority by the Water and Soil Directorate, Ministry of Works and Development, P.O. Box 12-041, Wellington, New Zealand.

MANAGEMENT GUIDELINES FOR PIPELINE EASEMENTS

Introduction	5
Location of the Line	5
Legal and Other Requirements	6
Right-of-Way Construction	7
Trenching and Backfill	9
Reinstatement	10
Re-establishment of Vegetation	11
Maintenance	12
Appendix: Contour Bank Design	13



INTRODUCTION

Since 1966 the Pipeline Project of the Ministry of Works and Development has laid between 1200 and 1300 km of pipe across a wide variety of terrain. Many more kilometres are likely to be laid in the years ahead.

In that time working procedures have been developed to make this process efficient, effective and sensitive to the needs of all parties involved, from the landowners, contractors, local bodies and others through to the clients. Laying a pipeline is not simply a matter of digging a trench, installing the pipe and filling in the hole. After the decision has been made to run a pipeline between two sites, the precise location of the line must be determined. This involves physical considerations and consultation with those who are likely to be affected.

Once a pipeline route is settled on, access, construction and reinstatement problems must be solved. Finally, maintenance of the easement should be an ongoing concern.

This publication outlines the installation procedures now used by the Pipeline Project. It is aimed at helping those directly involved in laying a line to appreciate their roles and rights in achieving a safe and functional end product. It complements the reports *A Guide to the Petroleum Pipeline Procedures* of the Ministry of Energy and *Environmental Guidelines for Gas and Petroleum Pipelines* of the Commission for the Environment¹ by discussing the restoration and easement maintenance procedures in more detail.

LOCATION OF THE LINE

When locating a pipeline route the major factors to consider are the safety of the public and pipeline, construction costs, and environmental and landowner considerations.

The first objective is to determine the practical routes. This is most easily done from a study of the appropriate maps, including topographical, cadastral, soil and land use capability maps. Routes can then be studied from the air and finally on the ground. Especially difficult sections such as river, road and rail crossings, steep and unstable areas, sections of rock and swamps are subject to special studies.

There are a number of groups, organisations and Government departments who are consulted for possible problems. These include landowners and the local offices of:

Ministry of Agriculture and Fisheries;
NZ Forest Service;
DSIR, Geological Survey and Soil Bureau;
Department of Lands and Survey;
Department of Internal Affairs, Wildlife Service;
Railways Corporation;
Ministry of Works and Development;
Department of Maori Affairs;
catchment authorities;
NZ Historic Places Trust;
Federated Farmers of NZ;
territorial local authorities.

Most of these will also submit comments for any environmental report. Early consultation will assist and speed up pipeline location and authorisation.

The line can then be pegged, surveyed and discussed with landowners and anyone else who may have specific interests that will need to be considered during and after construction.

1. These are available free from the Secretary, Ministry of Energy, Private Bag, Wellington, Attention: Oil and Gas Division; and the Commissioner, Commission for the Environment, P O Box 10-241, Wellington, respectively.

LEGAL AND OTHER REQUIREMENTS

The rights and requirements of those involved in the construction, operation and maintenance of a pipeline—landowner, contractor, Government and others—are outlined in the Petroleum Act 1937.

ACCESS TO LAND

Access to land may be required for investigation or for construction. The Act allows access to land for preliminary investigations, route location and engineering survey works. If reasonable notice is given to the landowner, officers who hold a survey warrant may enter onto the land, with the necessary equipment and assistance, to carry out preliminary investigations. There is provision in the Act for compensation to be paid to landowners who suffer loss or damage through this activity.

There are two methods by which access can be gained to carry out construction.

Consent

The Act allows holders of a Pipeline Authorisation to enter into an agreement with landowners for access to land for construction purposes.

If agreement cannot be reached, the authorisation holder may apply to the Minister of Energy for an Easement Certificate. This will give the holder a legal right to enter onto the land to carry out construction. The holder of the authorisation must first satisfy the Minister that he has made reasonable efforts to reach agreement but has not been able to do so. A landowner cannot withhold consent merely because agreement has not been reached on compensation.

Middle Line Notice

If a proposed pipeline is designated “of national importance”, a notice defining the centre line of the pipeline may be gazetted and registered against titles to the land affected. This, subject to notice being given to landowners, allows a legal right of entry for construction purposes.

The effect of a Middle Line Notice is to define the centre line of the pipeline and an area 100 m on either side. Construction may not exceed an area 30 m wide, within the 200 m strip, without the prior consent of the Secretary of Energy. The authorisation holder and the landowner may agree on the provision of extra working areas where necessary.

The above methods enable entry to be gained to land from a legal road. If the terrain prevents movement along the easement, the authorisation holder may reach an agreement with the landowner to use private accessways.

WATER RIGHTS

The authorisation holder should approach the appropriate regional water board(s) to obtain the necessary rights to interfere with any water bodies along the chosen route.

EASEMENTS

When the work is finished the authorisation holder must prepare legal survey plans defining the final position of the pipeline. From these plans easement certificates or transfer documents are prepared and registered against the title to the land. All plans approved and held by the chief surveyor are available for examination at the map counter in the District Office of the Department of Lands and Survey.

If the pipeline has been constructed under the authority of a Middle Line Notice, this is cancelled on registration of the easement document. The easement certificate outlines the restrictions over the easement area which are intended to protect the pipeline.

COMPENSATION

Landowners are paid compensation for all loss and/or damage arising out of the construction of the pipeline through their land. Compensation is paid not only for the acquisition of the easement but also for disturbance losses, such as loss of grazing, loss of production and loss of hay for the period from the date of entry until it is expected that full pasture recovery will be achieved, which is usually 2 to 3 years after completion of reinstatement.

Landowners can seek both valuation and legal advice about claims and are entitled to reimbursement for reasonable costs incurred in obtaining this advice.

LIAISON

The Pipeline Project of Ministry of Works and Development tries to ensure that, as early as possible, landowners are fully informed about what is happening, why it is happening and, if possible, when and how it is happening. Project staff will inform landowners of all their rights and entitlements.

As early as possible, a liaison officer will call on landowners and lessees to advise them of what is happening. Closer to construction, the officer will call again to discuss the likely effects the work will have on farming operations and try to ensure that steps are taken to minimise disturbance. The liaison officer is on call during the construction period and contact phone numbers of both the contractor and the liaison officer are made available to the landowner or occupier.

After restoration has been completed the liaison officer will call on the landowner to discuss compensation. Usually, agreement is reached and arrangements are made for payment.

Often a further call on the landowner is needed to obtain his or her signature on a formal transfer document which will grant the pipeline authorisation holder an easement across the land.

RIGHT-OF-WAY CONSTRUCTION

The construction of the right-of-way (ROW) is important for the smooth operation of other construction phases, especially the restoration.

Initially the project engineer and the contractor walk the line to determine problem areas, realignments, material requirements such as culverts and logs for swamp crossings, off ROW access, and where areas of extra land are needed at critical points such as road, railway and river crossings.

Topsoil Treatment

In constructing the ROW the topsoil, in almost all cases, is stripped to 300 mm or the depth of topsoil, whichever is less. In swamps and very steep hillsides soil movement must be kept to a minimum. In these places it may be better not to strip topsoil.

Stripped topsoil is stockpiled to prevent mixing, during construction, with subsoil and to reduce losses through erosion. This is most effectively done by having the machines stockpile the topsoil on the working side while trenching material goes on the other. This also helps restrict operations to the ROW. Care must be taken to ensure that the stockpile is not crossed by machines and vehicles operating within the ROW, causing it to be flattened and distributed over a wide area so that it is contaminated or lost from further use.

If topsoil is lost or its structure damaged by overworking, compaction, or being worked when wet, an adequate vegetative cover is very difficult to re-establish and long-term soil problems can develop. This effect of loss or damage to topsoil is compounded each

time another pipeline is put in the same easement as an existing line. If care is not taken long-term damage can quickly result. Formation of the ROW should endeavour to keep soil movement to a minimum.

Where major cut operations are necessary care must be taken to ensure that the excess material is safely stockpiled and not just pushed over the side in a "cut and side-cast" operation. Spill material is unstable and can cause erosion problems with associated downstream sediment problems. Sediment traps may have to be built, watercourses, dams and water supplies cleaned out, and landowners compensated for silt damage.

Suitable stockpile areas should be sorted out before construction begins. They must be on dry stable ground and existing slips must not be loaded to create further problems. Where cut and stockpile operations are on very difficult sites, careful consideration should be given to whether reinstatement should be made to follow the contours that previously existed. In some cases it might be prudent to adopt easier, more stable contours with a view to enhancing the stability of the country traversed.

Adequate subsoil and surface drainage should be installed to ensure the material is kept reasonably dry and is not eroded.

The topsoil should be stripped from the site for the trenching material stockpile, the subsoil material brought in compacted in layers and, if it is to be a permanent site, topsoil spread and regrassed as soon as possible.

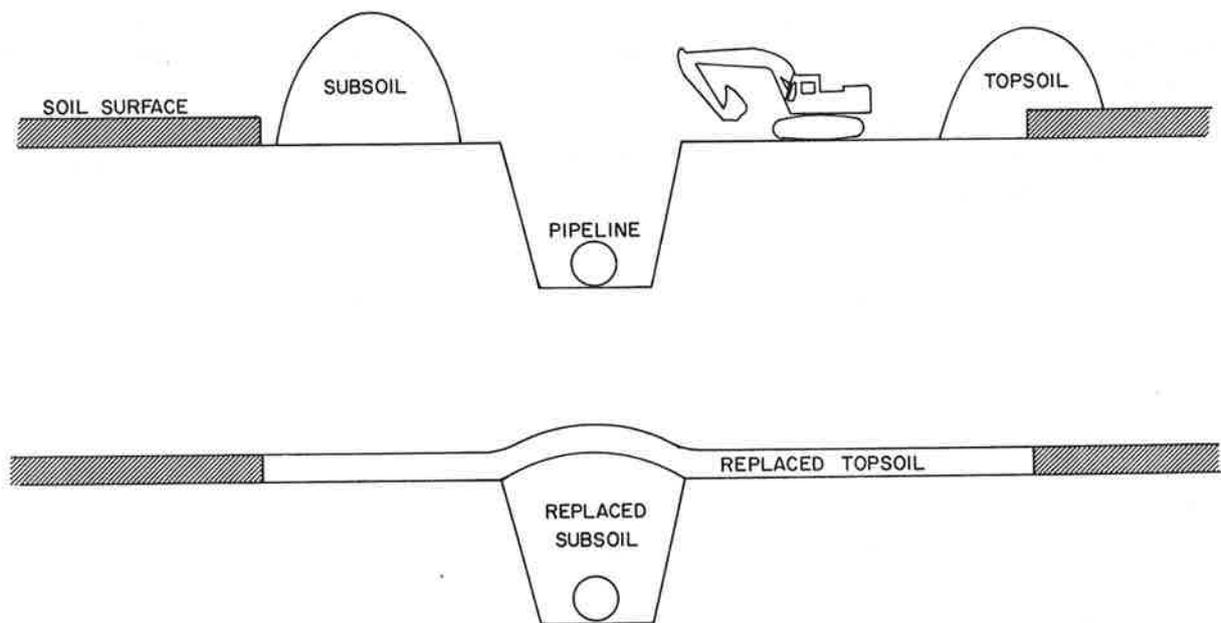


Figure 1: The recommended procedure for stripping, stockpiling and replacing topsoil and subsoil.

Water Control

Control of water on the ROW during construction is necessary if erosion is to be kept to a minimum and construction problems reduced. If the ROW is not damaged and dries quickly after heavy rain, construction delays, if any, are minimised.

Culverts should be laid in all small watercourses that carry water or will carry water after rain so that vehicles have access without running through the watercourse.

The culverts must be long enough to adequately span the accessway so that material from the ROW does not block them. Logs should be laid at right angles to the culvert to support material above the culvert.



Figure 2: McKee oil lines near New Plymouth, 1984. Note the stockpile of topsoil on one side and trenching material of subsoil on the other, with the trench and the right-of-way between. Access to the right-of-way is had by leaving a gap in the stockpile of subsoil and a plug in the trench.



Figure 3: Kinleith—Kawerau natural gas line, 1982. At problem points, such as stream crossings, extra working areas must be allowed for. If they are not, then stripped topsoil may be lost and restoration become difficult.



Figure 4: A section of the Hawkes Bay natural gas line being laid near Ashhurst, 1983. Note the problems of using a restricted right-of-way through areas of cropping. Vehicles damage the topsoil by using it to gain access to the line.



Figure 5: Kinleith—Kawerau natural gas line, 1982. Foam breakers can be used to stop water flowing down the trench and to support backfill material.



Figures 6 and 7: During (1977) and after (1982). The Maui gas pipeline at Whitecliffs, north of New Plymouth.



Figure 8: Port loading line, New Plymouth, 1983. This face was difficult to reinstate. The top section, which is sand, was covered with plastic mesh and a wood fibre mulch and then seeded. The lower section was hydroseeded. The bench drains were planted with flax.